HAMAMATSU

OUR

BUSINESS

GATED MICROCHANNEL PLATE PHOTOMULTIPLIER TUBES (MCP-PMT) R5916U-50 SERIES

FEATURES


PHOTON IS

- High Speed Gating by Low Supply Voltage (+10 V) Gate Rise Time : 1 ns [®] Gate Width : 3 ns
- •Fast Rise Time : 180 ps Narrow T.T.S. [®] : 90 ps
- High Switching Ratio: 10⁸ at 500 nm
- Low Switching Noise
- Low Dark Noise
- •Variety of Photocathode Available

APPLICATIONS

Environmental monitoring

- •Satellite laser ranging
- •Time resolve fluorescence decay analysis

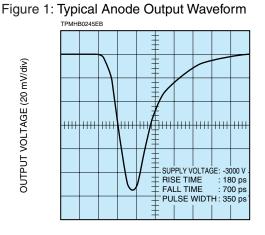

TIME (0.2 ns/div)

Figure 2: Block Diagram of Anode Output Waveform Measuring Apparatus


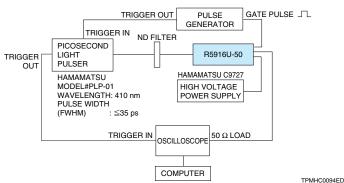




Figure 3: Typical Gate Bias Characteristics (R5916U-50)

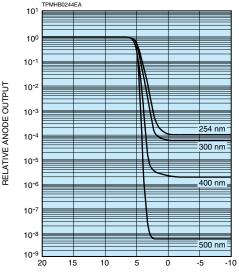

INPUT GATE BIAS VOLTAGE (V)

These are the anode output ratios measured at the forward and reverse bias voltages with respect to the photocathode.

Subject to local technical requirements and regulations, availability of products included in this promotional material may vary. Please consult with our sales office. Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are subject to change without notice. No patent rights are granted to any of the circuits described herein. ©2015 Hamamatsu Photonics K.K.

GATED MICROCHANNEL PLATE PHOTOMULTIPLIER TUBES (MCP-PMT) R5916U-50 SERIES

SPECIFICATIONS

PHOTOCATHODE SELECTION GUIDE

Suffix Number	Spectral Response (nm)		Photocathode Material	Photocathode
	Range	Peak Wavelength		Window Material
50	160 to 850	430	Multialkali	Synthetic Silica
51	160 to 910	600	Extended Red Multialkali	Synthetic Silica
52	160 to 650	400	Bialkali	Synthetic Silica
53	160 to 320	230 to 250	Cs-Te	Synthetic Silica

GENERAL CHARACTERISTICS

Parameter	Description / Value	Unit
Effective Photocathode Diameter	10	mm
MCP Channel Diameter	6	μm
Dynode Structure ©	2-stage Filmed MCP	_
Capacitance between Mesh Electrode and Photocathode	14.7	pF
Weight	143	g
Operating Ambient Temperature	-50 to +50	°C
Storage Temperature	-50 to +50	°C

MAXIMUM RATINGS (Absolute Maximum Values)

Parameter	Value	Unit
Supply Voltage	-3400	V
Average Anode Current	100	nA
Pulse Peak Current [®]	350	mA
Voltage Divider Current	110	μA

ELECTRICAL CHATACTERISTICS (R5916U-50) at +25 °C ©

Parameter		Min.	Тур.	Max.	Unit
Cathode Sensitivity	Luminous 🖻	100	150	—	μA/Im
Callioue Sensitivity	Radiant at 430 nm	—	52	—	mA/W
Gain (at -3000 V)		1 × 10 ⁵	$3 imes 10^5$	—	—
Anode Dark Counts (at -3000 V) ©		—	10	—	S ⁻¹
Switching Ratio (at 500 nm)		_	1.7 × 10 ⁸	—	_
	Rise Time 🖲	—	180	—	ps
Time Response (at -3000 V)	Fall Time ①	—	700	1000	ps
	I.R.F. (FWHM) 🕽	_	95 ®	_	ps

GATING CHARACTERISTICS


Parameter		Min.	Тур.	Max.	Unit
	Voltage	10	—	20	V
Input Gate Pulse	Width	3	_	10000	ns
	Duty Cycle	—		1	%
DMT Beenenee	Rise Time	—	1	3	ns
PMT Response	Fall Time	—	1	_	ns




NOTES

- A This is defined at 10 % to 90 % of full pulse height.
- B Transit Time Spread (T.T.S.) is the fluctuation in transit time among individual pulses and specified as an FWHM (full width at half maximum) with the incident light having a single photoelectron state.
- © Two microchannel plates (MCPs) are incorporated as a standard but we can provide it with either one or three MCPs as an option depending upon your request.
- D This is specified under the operating conditions that the repetition rate of light input is 100 Hz or less and its pulse width is 70 ps or less.
 E This is based on R5916U-50. All other types (suffix number 51, 52 and 53) have different characteristics based on photocathode sensitivity and anode dark
- counts. (F) The light source used to measure the luminous sensitivity is a tungsten filament lamp operated at a distribution temperature of 2856 K. The incident light
- (b) The light source used to measure the luminous sensitivity is a tungsten filament lamp operated at a distribution temperature of 2856 K. The incident light intensity is 10⁻⁴ Im and 20 V is applied between photocathode and all other electrodes shorted as an anode.
- © This is specified at a duty cycle of 1 %.
- This is the mean time difference between the 10 % and 90 % amplitude points on the output waveform under full photocathode illumination.
- ① This is the mean time difference between the 90 % and 10 % amplitude points on the tailing edge of the output waveform under full photocathode illumination.
 ② I.R.F. stands for Instrument Response Function which is a convolution of the δ-function (H(t)) of the measuring apparatus and the excitation function (E(t)) of a laser. The I.R.F. is given by the following formula: I.R.F. = H(t)* E(t)
- (K) We specity the I.R.F. as an FWHM of the time distribution taken by using the measuring apparatus in Figure 7 that is Hamamatsu standard I.R.F. measuring set-up. It can be estimated by the following equation: (I.R.F. (FWHM))² = (T.T.S.)² + (Tw)² + (Tj)²
 - where Tw is the pulse width of the laser and T is the time jitter of all equipments used in the measurement. An I.R.F. is provided with the tube.

INPUT GATE PULSE

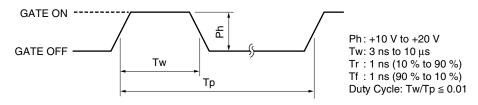

PMT OPERATING MODE

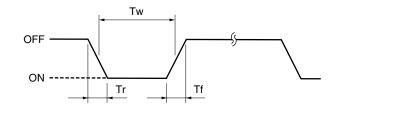

R5916U-50 will be provided in a "normally off" mode configuration. It will be gated "on" only when the gate input pulse (+10 V to +20 V) is applied and gated "off" when it is grounded or left in open.

However, we can also provide this device in a "normally on" mode configuration which can be operated under the same operating conditions above to give inverse performance. Please specify if you require a "normally on" mode configuration when placing an order.

TYPICAL PERFORMANCE DATA

Figure 4: Spectral Response Characteristics


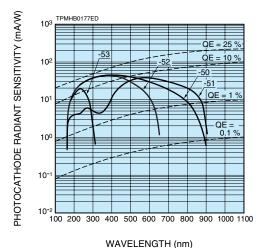



Figure 5: Instrument Response Function (I.R.F.)

TACCC0044EA

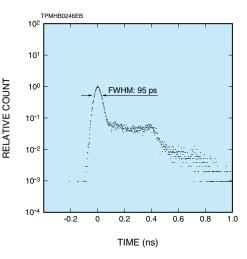


GATED MICROCHANNEL PLATE PHOTOMULTIPLIER TUBES (MCP-PMT) R5916U-50 SERIES

Figure 6: Gain

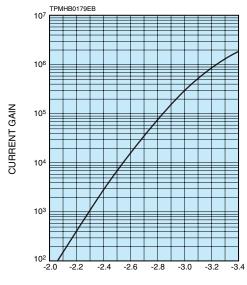


SUPPLY VOLTAGE (kV)

Figure 8: Pulse Height Distribution (PHD)

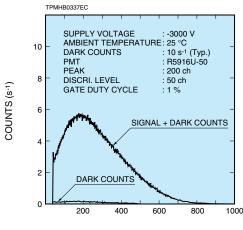

PULSE HEIGHT (CHANNEL NUMBER)

Figure 10: Gate Pulse Response

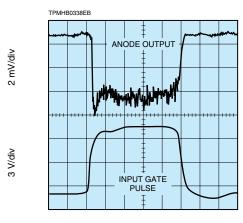

5 ns/di	v
Supply Voltage Ambient Temperatur Gate Pulse Height Gate Pulse Width Repetition Rate	: -3000 V
•	

Figure 7: Block Diagram of I.R.F. (Instrument Response Function) Measuring Apparatus


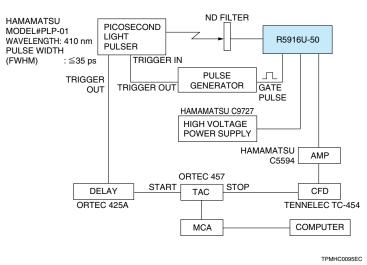


Figure 9: Block Diagram of PHD Measuring Apparatus

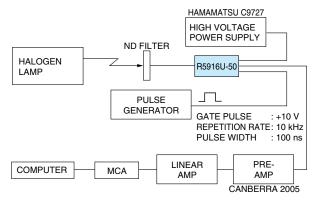

TPMHC0102EB

Figure 11: Block Diagram of Gate Pulse Response Measuring Apparatus

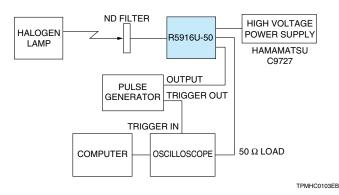




Figure 12: Dimensional Outline (Umit: mm)


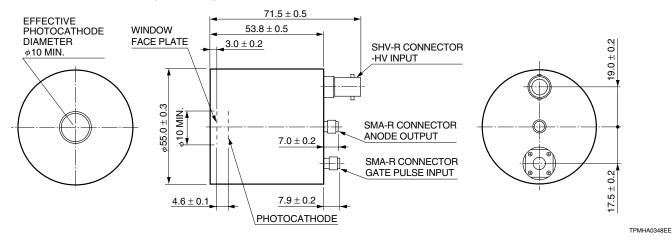


Figure 13: Voltage Divider and Gate Circuit

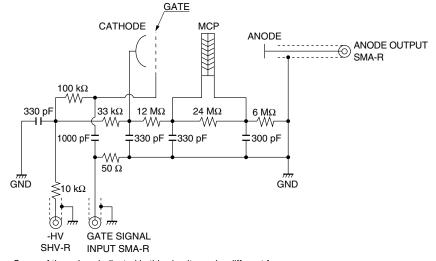


Some of the values indicated in this circuit may be different from actual values to meet the specifications.

TPMHC0090EC

FUNDAMENTAL OPERATING PROCEDURE

- 1) A general set-up for R5916U-50 is shown at right.
- This is to perform a photon counting with gating function and to detect weak light generated from the samples by the laser excitation.
- 2) The pulse generator used in this set-up produce an output having +10 V in height and adjustable width which you require. It also produces a trigger signal synchronyzing an output pulse to the laser output. The R5916U-50 is in gate off mode in the beginning to prevent unwanted signals caused by the laser light or some scattered light which may strike the photocathode directly.
- 3) The pulse generator required for gating function is very simple. The required specifications for the pulse generator is as follows:
 - a. Output voltage is +10 V to +15 V.
 - b. Pulse width is just what you require (between 5 ns and 10 $\mu s).$

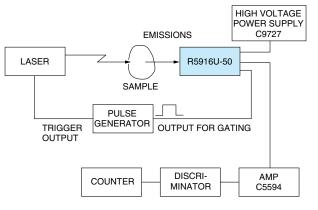

TPMHC0096EA

EXAMPLE OF APPLICATIONS

ENVIRONMENTAL MONITORING

This is an example of LIDAR (Light detection and ranging) application where our gateable MCP-PMT has been used. The sketch at right shows a LIDAR system which includes a picosecond laser, electronics (gate driver), optics, computer and sensor (gateable MCP-PMT). This system is to investigate the distribution of planktons in the ocean for pollution monitoring.

The laser light irradiates sea water and generates some scattered light due to contaminated water and fluorescence due to chlorophyll in planktons. By detecting these emissions, a distribution of quantative and qualitative informations on these objects can be obtained. However, there are enormous back ground emissions due to reflections of the laser light off of the water's surface as well as from particles in an air or some unknown materials in the ocean. Sun light is also a source of back ground if the experiment has to be performed in day time.

In this application, fast gating function is very effective to minimize the back ground noise. The tube is gated on only during the time when essence emissions arrive at the detector.

The switching ratio characteristics are also very important to help minimize the noise. The R5916U-50 series tubes are superior on both characteristics.


SATELLITE LASER RANGING (SLR)

This is also an example of a LIDAR application where the gateable MCP-PMT has been used to measure the distance between the observatory and a satellite.

The operating principle is that a satellite is irradiated by the fast laser pulse and then a reflected light is directed to the detector through the optics placed on the ground. The time interval of the signals from the source to the detector in the system is the time of flight (TOF) from the observatory to the satellite and can be converted into a distance between them.


This entire system consists of fast laser, optics, electronics, gate driver and detectors. The data taken by experiments with this system are also utilized for geodesy or plate motion analysis on a world-wide level.

Because of the improved timing characteristics with R5916U-50 series, more precise measurements can be expected.

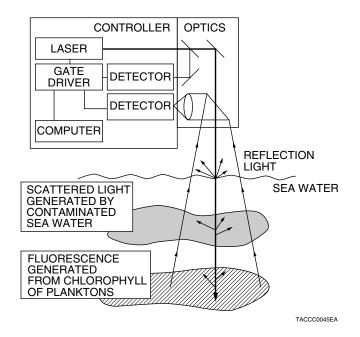

LIDAR (Light detection and ranging) system a)

Laser Satellite Ranging system b)

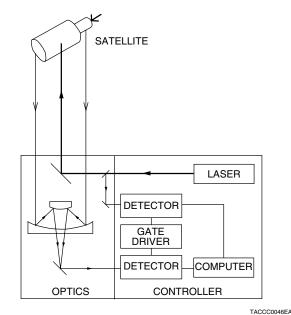

References

a) Japan Marine Science and Technology Center: R&D of Laser Ranging Technology (Published in Japan)



PRECAUTIONS FOR PROPER OPERATION

- 1. The photomultiplier tube (PMT) in this data sheet is a glass product under high vacuum. Excessive pressure or shocks to the tube from the surroundings could cause a permanent damage. Please pay special attention on insuring proper handling.
- 2. Do not expose the photocathode to direct sunlight and any light stronger than the room light even during of no operation.
- 3. Do not supply any voltage higher than specified. Also make sure the output current does not exceed the maximum current specified.
- 4. This device is very sensitive even with weak light input. When applying high voltage to the tube, gradually (ideally 100 V step) and carefully increase the voltage while monitoring the output using a current meter or oscilloscope (if the PMT has multianodes, please make all the anode summed when monitoring). Also make sure before use that the polarity of the applied voltage is correct.
- 5. Never touch the input window with your bare hands. In case the window contaminated by dust or grease, wipe it off using alcohol and a soft cloth or dust free tissue.
- 6. Do not remove any input or output cables when high voltage is applied.
- 7. Do not place any objects of ground potential closer than 5 mm to the photocathode window when negative high voltage is applied to the photocathode. It could generate extra noise and damage the photocathode permanently.
- 8. Do not operate or store in a place of unspecified temperature and humidity.
- 9. If the tube won't be used with a cooler, it is recommended to leave the tube in darkness (your instrument without any input light) for 30 minutes or so before start any measurements because it occasionally takes a little while until its dark noise settles down.

WARRANTY

The detectors indicated in this data sheet are warranted to the original purchaser for a period of 12 months following the date of shipment. The warranty is limited to repair or replacement of any defective material due to defects in workmanship or materials used in manufacture.

- 1. Any claim for damage of shipment must be made directly to the delivering carrier within five days.
- 2. Customer must inspect and test all detectors within 30 days after shipment. Failure to accomplish said incoming inspection shall limit all claims to 75 % of invoice value.
- 3. NO credit will be issued for broken detector unless in the opinion of Hamamatsu the damage is due to a manufacturing defect.
- 4. NO credit will be issued for any detector which in the judgement of Hamamatsu has been damaged, abused, modified or whose serial number or type number have been obliterated or defaced.
- 5. NO detector will be accepted for return unless permission has been obtained from Hamamatsu in writing, the shipment has been returned repaired and insured, the detector is packed in their original box and accompanied by the original data sheet furnished to the customer with the tube, and a full written explanation of the reason for rejection of detector.

GATED MICROCHANNEL PLATE PHOTOMULTIPLIER TUBES (MCP-PMT) R5916U-50 SERIES

ACCESSORIES


THERMOELECTRIC COOLING UNIT C10373 Series



Left: Power Supply Right: Cooled PMT Housing

Parameter	Description / Value		
Cooling Method	Thermoelectric cooling using peltier module		
Heat Exchange Medium	Water		
Cooling Temperature (with cooling water at +20 °C)	Approx30 °C		
Cooling Time	Approx. 120 min		
Applicable PMT Holder (sold separately) *	E3059-501		
AC Input Voltage	100 V to 240 V		
Operating Ambient Temperature ^(A)	+5 °C to +40 °C / Below 75 %		
Storage Temperature [®]	-15 °C to +50 °C / Below 80 %		
NOTE: (A)No condensation * The E3059-501 exclusive holder is necessary for R5916U-50 series.			

HIGH SPEED AMPLIFIER C5594 Series

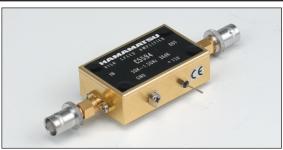

Suffix number and input / output connector

Type No.	Input Connector	Output Connector
C5594-12	SMA Plug (male)	SMA Receptacle (female)
C5594-22	SMA Receptacle (female)	SMA Receptacle (female)
C5594-44	BNC Receptacle (female)	BNC Receptacle (female)

Specifications

Parameter	Description / Value	
Frequency Response Range		50 kHz to 1.5 GHz
Voltage Gain Typ.		36 dB
Current-to-Voltage Conversion F	3.15 mV/μA	
Input / Output Impedance	50 Ω	
Noise Figure (NF) Typ.		5 dB
Supply Voltage	+12 V to 16 V	
Supply Current	Max.	95 mA

BENCH-TOP HIGH VOLTAGE POWER SUPPLY C9727/-01



Specifications

Parameter	Description / Value		
Output Voltage		0 V to -3500 V	
Maximum Output Current		2 mA	
Line Regulation Against	Max.	±0.005 %	
±10 % Line Voltage Change ^(A)	ινιαλ.	10.000 /8	
Load Regulation Against	Max.	±0.03 %	
0 % to 100 % Load Change A	ινιαλ.	10.03 %	
Ripple / Noise (p-p) ^{AB}	Тур.	0.003 %	
Drift (after 30 min Warm-up) AB	Drift (after 30 min Warm-up) AB Typ.		
Temperature Coefficient ^(A) ^(B) Typ.		±0.01 % / °C	
AC Input Voltage		100 V to 240 V	
Power Consumption AB Max.		60 V·A	
Operating Ambient		0 °C to +40 °C / below 85 %	
Temperature / Humidity ©	0 C 10 +40 C / Delow 85 %		
Storage Temperature / Humi	-20 °C to +50 °C / below 90 %		
NOTE: At maximum output voltage BAt maximum output current			
©No condensation			

HAMAMATSU PHOTONICS K.K. www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Electron Tube Division

314-5, Shimokanzo, Iwata City, Shizuoka Pref., 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater. N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218 E-mail: usa@hamamatsu.com Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-8211, Hersching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658 E-mail: info@hamamatsu.de France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10 E-mail: info@hamamatsu.de United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44)1707-294888, Fax: (44)1707-325777 E-mail: info@hamamatsu.c.uk North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 SE-164 40 Kista, Sweden, Telephone: (46)8-509-031-00, Fax: (46)8-509-031-01 E-mail: info@hamamatsu.se Italy: Hamamatsu Photonics Italia S.r.l.: Strada della Moia, 1 int. 6, 20020 Arese (Milano), Italy, Telephone: (39)02-93581733, Fax: (39)02-93581741 E-mail: info@hamamatsu.it TPMH1102E10 China: Hamamatsu Photonics (China) Co., Ltd.: B1201 Jiaming Center, No.27 Dongsanhuan Beilu, Chaoyang District, Beijing 100020, China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866 E-mail: hpc@hamamatsu.com.com