



MPPC®modules

C13366 series (GD type)

Photon counting module for low-level-light detection, Digital output

The C13366 series (GD type) are photon counting modules capable of detecting low level light. These modules consist of a thermoelectrically cooled MPPC, an amplifier, a comparator circuit, a high-voltage power supply circuit, and a temperature control circuit. The photosensitive area is available in two sizes of 1.3×1.3 mm and 3×3 mm, and the signal output is digital. Modules operate just by connecting them to an external power supply (±5 V).

Features

- Built-in TE-cooled MPPC [MPPC for precision measurement (new product)]
- High sensitivity in the short wavelength range
- Built-in temperature control function
- Low dark count
- Low afterpulse
- Digital output

- Applications

- Low-level-light measurement
- Particle diameter measurement
- Fluorescence measurement
- Analytical instrument

Structure

| Parameter | Symbol | C13366-1350GD | C13366-3050GD | Unit |
|--------------------------|--------|---------------|---------------|------|
| Internal MPPC | - | S13362-1350DG | S13362-3050DG | - |
| Photosensitive area size | - | 1.3 × 1.3 | 3 × 3 | mm |
| Pixel pitch | - | 50 | | |
| Number of pixels | - | 667 | 3600 | - |

Absolute maximum ratings

| Parameter | Symbol | Condition | Value | Unit |
|-----------------------|--------|-----------------------|------------|------|
| Supply voltage | Vs | | ±6 | V |
| Operating temperature | Topr | No dew condensation*1 | -10 to +40 | °C |
| Storage temperature | Tstg | No dew condensation*1 | -20 to +70 | °C |

*1: When there is a temperature difference between a product and the surrounding area in high humidity environment, dew condensation may occur on the product surface. Dew condensation on the product may cause deterioration in characteristics and reliability.

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

Electrical and optical characteristics (Typ. Ta=25 °C, λ=λp, Vs=±5 V, unless otherwise noted)


| Parameter | Symbol Condition | C13366-1350GD | | | C13366-3050GD | | | Unit | |
|--|------------------|---------------------|---------------------------------------|------|---------------|------|------|------|------|
| | | Condition | Min. | Тур. | Max. | Min. | Тур. | Max. | Unit |
| Spectral response range | λ | | 320 to 900 | | 320 to 900 | | | nm | |
| Peak sensitivity wavelength | λр | | - | 450 | - | - | 450 | - | nm |
| Element temperature (setting temperature) | Td | | - | -20 | - | - | -20 | - | °C |
| Photon detection efficiency | PDE | Threshold: 0.5 p.e. | - | 40 | - | - | 40 | - | % |
| Dark count | CD | Threshold: 0.5 p.e. | - | 2.5 | 7 | - | 12 | 36 | kcps |
| Comparator output | - | | TTL compatible | | | - | | | |
| Afterpulse probability | - | 100 ns to 500 ns | - | 0.1 | - | - | 0.1 | - | % |
| Crosstalk probability | - | | - | 1 | - | - | 3 | - | % |
| Comparator threshold level | - | | adjustable in 9 steps from 0.5 to 8.5 | | | p.e. | | | |

Electrical characteristics

| Parameter | Symbol | Condition | Min. | Тур. | Max. | Unit | |
|---------------------|--------|-----------|-------|------|-------|------|--|
| Supply voltage*2 | +Vs | | +4.75 | +5 | +5.25 | V | |
| | -Vs | | -4.75 | -5 | -5.25 | v | |
| Current consumption | Ic | +Vs | - | +200 | +1000 | m۸ | |
| | IC | -Vs | - | -20 | -40 | mA | |


*2: A power supply with 1 A or higher output must be used.

Block diagram

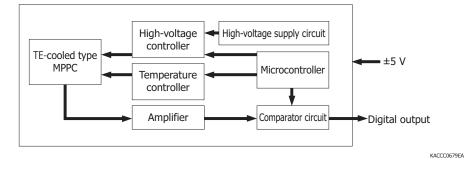


Connection example

Using the included power cable, connect the MPPC module to a power supply. You can count output pluses by conecting the MPPC module to a frequency counter.

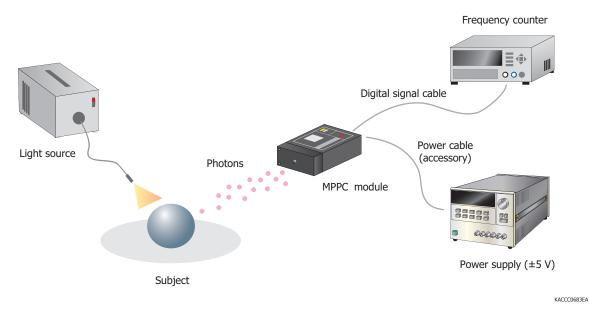







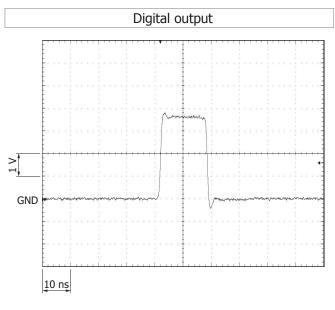

Photon detection efficiency vs. wavelength

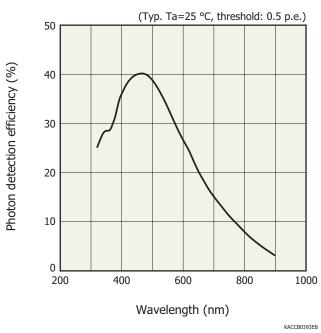


Linearity

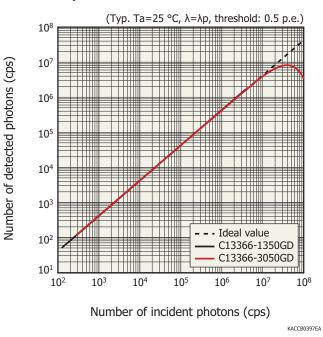

HAMAMATSU PHOTON IS OUR BUSINESS

Dimensional outline (unit: mm)

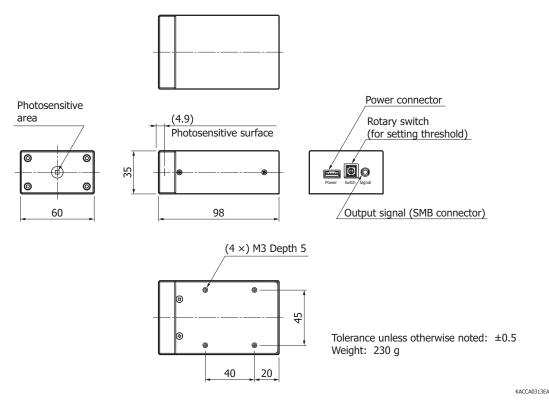

Accessories

- · Power cable
- · Instruction manual

Options (sold separately)

Coaxial converter adapter A10613 series

The A10613 series is a coaxial adapter that converts the SMB coaxial connector for signal-output on the MPPC module to a BNC or SMA coaxial connector. This adapter allows connecting a BNC or SMA cable to the MPPC module.



Precautions

- · For cleaning the product, wipe using a clean, soft, dry cloth. Do not use organic solvents such as thinner and acetone.
- Do not cover the product with a dark cloth or something similar while the product is running. Covering the product can cause the internal temperature to rise and cause abnormal operation.



Lineup of MPPC modules

| Type no. | Output | Effective photosensitive area (mm) | Pixel pitch (µm) | Cooling | |
|---------------|----------|------------------------------------|---------------------|------------|--|
| C13365-1350SA | Analog | 1.3 × 1.3 | | Non-cooled | |
| C13365-3050SA | Analog | 3.0 × 3.0 | 50 | | |
| C13366-1350GA | Averla e | 1.3 × 1.3 | | TE-cooled | |
| C13366-3050GA | Analog | 3.0 × 3.0 | 50 | IL-COOleu | |
| C13366-1350GD | Digital | 1.3 × 1.3 | - | TE-cooled | |
| C13366-3050GD | Digital | 3.0 × 3.0 | | | |

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

Precautions

· Disclaimer

MPPC is a registered trademark of Hamamatsu Photonics K.K.

Information described in this material is current as of April, 2016.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.



www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81) 53-434-3311, Fax: (81) 53-434-5184

1120-1 ICHINO-CHO, HIGdShi-KU, HarldHatSu City, 453-8558 Japah, Telephone: (81) 53-434-3511, rdx: (81) 53-434-5184 U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218 Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerst: 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 8152-375-0, Fax: (49) 8152-265-8 France: Hamamatsu Photonics France S.A.R.L: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (49) 8152-375-0, Fax: (33-(1) 69 53 71 10 United Kingdom: Hamamatsu Photonics IX Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777 North Europe: Hamamatsu Photonics Norden AB: Torshannsgatan 35 16440 Kista, Sweden, Telephone: (39) 02-93581731, Fax: (39) 02-93581741 China: Hamamatsu Photonics (China) Co., Ltd.: B1201, Jiaming Center, No.27 Dongsanhuan Beilu, Chaoyang District, Beijing 100020, China, Telephone: (86) 10-6586-6006, Fax: (86) 10-6586-2866

Cat. No. KACC1229E04 Apr. 2016 DN