


Infrared LED

L8957

Low cost LED ideal for optical encoders

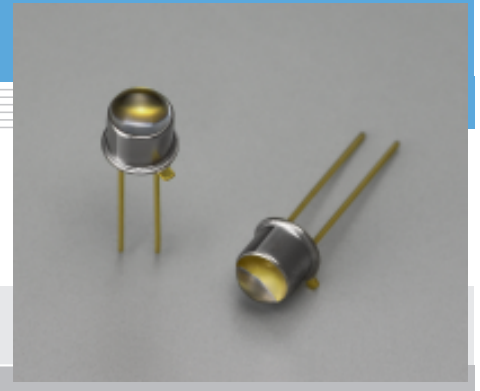

L8957 is an infrared LED using a low-cost lens and available at a lower price than other products up to now.

Features

- Low price
- Uses low cost lens

Applications

- Optical encoders
- Optical switches

■ Absolute maximum ratings (Ta=25 °C, unless otherwise noted)

Parameter	Symbol	Condition	Value	Unit
Reverse voltage	VR		5	V
Forward current	IF		80	mA
Forward current reduction rate	-		0.67	mA/°C
Pulse forward current	IFP	Pulse width=10 μs Duty ratio=1 %	0.5	A
Pulse forward current reduction rate	-		4.2	mA/°C
Power dissipation	P		150	mW
Operating temperature	Topr		-30 to +85	°C
Storage temperature	Tstg		-40 to +100	°C

■ Electrical and optical characteristics (Ta=25 °C)

Parameter	Symbol	Condition	Min.	Typ.	Max.	Unit
Peak emission wavelength	λ_p	IF=30 mA	840	870	900	nm
Spectral half width	$\Delta\lambda$	IF=30 mA	-	45	-	nm
Optical output *1	Pe	IF=30 mA	1.5	2.1	-	mW
Forward voltage	VF	IF=30 mA	-	1.5	1.65	V
Reverse current	IR	VR=5 V	-	-	5	μA
Spot light size *2	Bw	IF=30 mA	4.8 *3	5.4	-	mm
Cut-off frequency *4	fc	IF=30 mA ± 4 mAp-p	25	40	-	MHz


*1: Measured with a photodiode (active area: $\phi 8$ mm) installed 10 mm away from LED stem undersurface.

*2: Full width at half maximum of beam spot measured with an image sensor installed 13 mm away from LED stem undersurface.

*3: Reference value


*4: Frequency at which the optical output drops by -3 dB from that at 100 kHz.

■ Emission spectrum

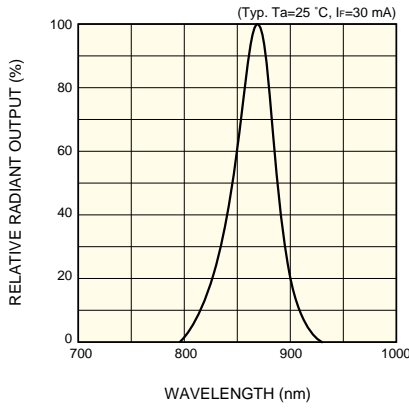


KLEDB0218EA

■ Optical output vs. forward current

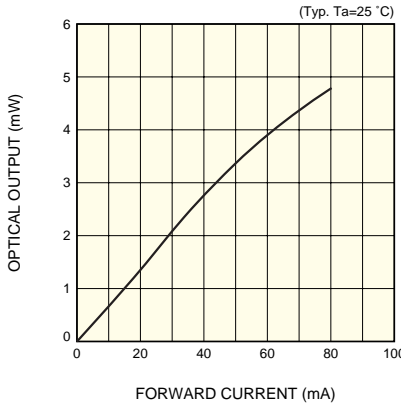


KLEDB0300EB

■ Forward current vs. forward voltage

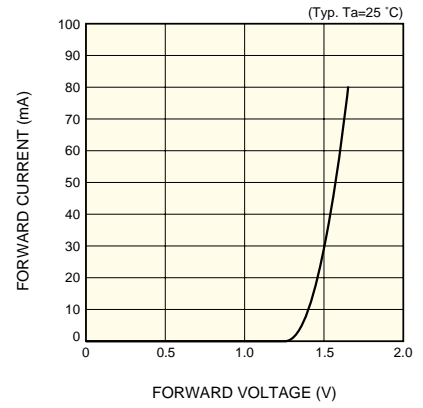


KLEDB0227EB

■ Directivity

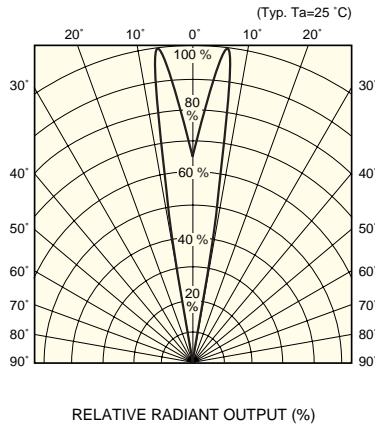


KLEDB0247EA

■ Radiant output vs. ambient temperature

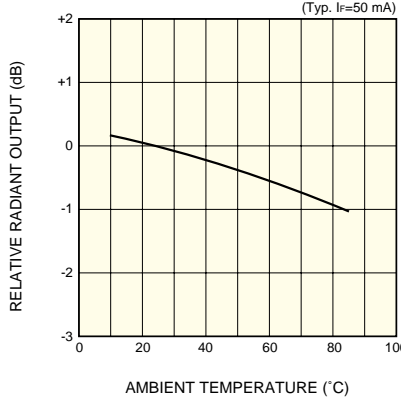


KLEDB0228EA

■ Allowable forward current vs. ambient temperature

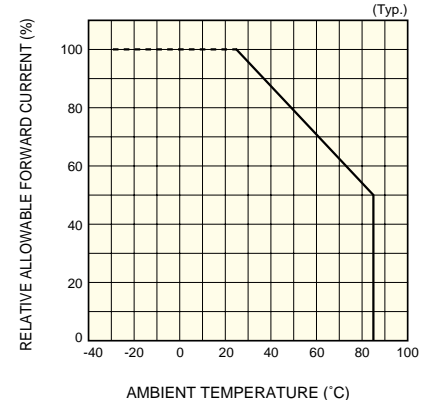


KLEDB0228EB

■ Allowable forward current vs. duty ratio

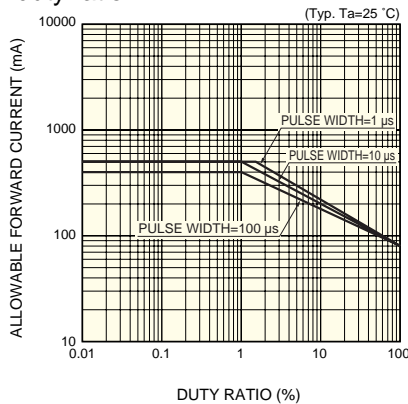


KLEDB0288EA

■ Light intensity distribution

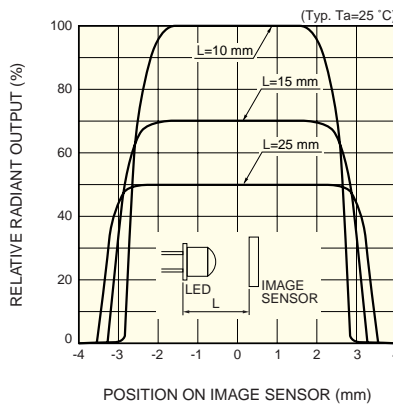

KLEDB0248EB

■ Dimensional outline (unit: mm)

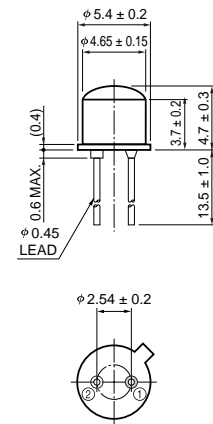

COMMON TO CASE
② ← ①

KLEDA0077EA

HAMAMATSU

Information furnished by HAMAMATSU is believed to be reliable. However, no responsibility is assumed for possible inaccuracies or omissions. Specifications are subject to change without notice. No patent rights are granted to any of the circuits described herein. ©2007 Hamamatsu Photonics K.K.

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81) 53-434-3311, Fax: (81) 53-434-5184, www.hamamatsu.com

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P.O.Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1) 908-231-0960, Fax: (1) 908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49) 08152-3750, Fax: (49) 08152-2658

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: 33-(1) 69 53 71 00, Fax: 33-(1) 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, United Kingdom, Telephone: (44) 1707-294888, Fax: (44) 1707-325777

North Europe: Hamamatsu Photonics Norden AB: Smidesvägen 12, SE-171 41 Solna, Sweden, Telephone: (46) 8-509-031-00, Fax: (46) 8-509-031-01

Italy: Hamamatsu Photonics Italia S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39) 02-935-81-733, Fax: (39) 02-935-81-741