


InAsSb photovoltaic detectors

[With band-pass filter]

P13243 series

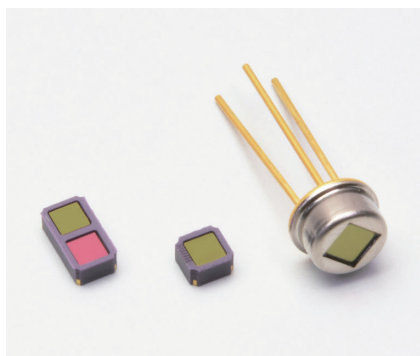

Infrared detectors with band-pass filter (3.3 μm, 3.9 μm, 4.26 μm, 4.45 μm)

These are InAsSb photovoltaic detectors that use a band-pass filter for the window. Types using a band-pass filter with a center wavelength of 3.3 μm, 3.9 μm, or 4.26 μm are suitable for gas measurement, and a type using a band-pass filter of 4.45 μm is suitable for flame monitoring. These are environmentally friendly infrared detectors and do not use lead, mercury, or cadmium, which are substances restricted by the RoHS Directive. They are replacements for conventional products containing these substances. A two-element type that can detect two wavelength is also available.

Feature

- High sensitivity
- High-speed response
- High shunt resistance
- Compact, surface mount ceramic package
- Compatible with lead-free solder reflow

Applications

- Gas measurement (CH₄, CO₂)
- Frame monitors (CO₂ resonance radiation)

Option (sold separately)

- Amplifier for infrared detector **C4159-01**

Structure

Type no.	Window material*1	Package	Coolong	Photosensitive area (mm)	Field of view FOV (degrees)		
P13243-033CF	BPF (3.3 μm)	Ceramic	Non-cooled	0.7 × 0.7	90		
P13243-033MF	BPF (3.3 μm)	TO-46			82		
P13243-039CF	BPF (3.9 μm)	Ceramic			90		
P13243-039MF	BPF (3.9 μm)	TO-46			82		
P13243-043CF	BPF (4.26 μm)	Ceramic			90		
P13243-043MF	BPF (4.26 μm)	TO-46			82		
P13243-045CF	BPF (4.45 μm)	Ceramic			90		
P13243-045MF	BPF (4.45 μm)	TO-46			82		
P13243-015CF	BPF (3.3 μm)	Ceramic					90
	BPF (3.9 μm)						
P13243-016CF	BPF (4.26 μm)						
	BPF (3.9 μm)						

*1: BPF: Band-pass filter

➤ Absolute maximum ratings

Type no.	Reverse voltage V _R (V)	Operating temperature T _{opr} *2 (°C)	Storage temperature T _{stg} *2 (°C)	Incident light level (W/cm ²)	Soldering temperature T _{sol} (°C)
P13243-033CF	1	-40 to +85	-40 to +85	1	240 (once)*3
P13243-033MF					-
P13243-039CF					240 (once)*3
P13243-039MF					-
P13243-043CF					240 (once)*3
P13243-043MF					-
P13243-045CF					240 (once)*3
P13243-045MF					-
P13243-015CF					240 (once)*3
P13243-016CF					240 (once)*3

*2: No dew condensation

When there is a temperature difference between a product and the surrounding area in high humidity environments, dew condensation may occur on the product surface. Dew condensation may cause deterioration in characteristics and reliability.

*3: Reflow soldering, JEDEC J-STD-020 MSL 2, see P.6

Note: Exceeding the absolute maximum ratings even momentarily may cause a drop in product quality. Always be sure to use the product within the absolute maximum ratings.

➤ Electrical and optical characteristics (Typ. T_a=25 °C unless otherwise noted)

Type no.	Center wavelength CWL			Spectral response half width FWHM		Photosensitivity S*4 λ=CWL (mA/W)	Shunt resistance R _{sh} V _R =10 mV (kΩ)	Detectivity D* (CWL, 1200, 1)		Noise equivalent power NEP λ=CWL		Rise time t _r *5 (ns)	Terminal capacitance C _t *6 (pF)
	Min. (nm)	Typ. (nm)	Max. (nm)	Typ. (nm)	Max. (nm)			Min. (cm·Hz ^{1/2} /W)	Typ. (cm·Hz ^{1/2} /W)	Min. (W/Hz ^{1/2})	Typ. (W/Hz ^{1/2})		
P13243-033CF	3270	3300	3330	160	180	2.3	300	4.1 × 10 ⁸	5.1 × 10 ⁸	1.4 × 10 ⁻¹⁰	1.7 × 10 ⁻¹⁰	15	0.7
P13243-033MF													
P13243-039CF	3820	3900	3980	90	110	3.0		5.2 × 10 ⁸	6.5 × 10 ⁸	1.1 × 10 ⁻¹⁰	1.3 × 10 ⁻¹⁰		
P13243-039MF													
P13243-043CF	4217	4260	4303	140	160	3.1		5.5 × 10 ⁸	6.9 × 10 ⁸	1.0 × 10 ⁻¹⁰	1.3 × 10 ⁻¹⁰		
P13243-043MF													
P13243-045CF	4400	4450	4500	350	400	3.7		6.5 × 10 ⁸	8.2 × 10 ⁸	8.5 × 10 ⁻¹¹	1.1 × 10 ⁻¹⁰		
P13243-045MF													
P13243-015CF	3270	3300	3330	160	180	2.3		4.1 × 10 ⁸	5.1 × 10 ⁸	1.4 × 10 ⁻¹⁰	1.7 × 10 ⁻¹⁰		
	3820	3900	3980	90	110	3.0		5.2 × 10 ⁸	6.5 × 10 ⁸	1.1 × 10 ⁻¹⁰	1.3 × 10 ⁻¹⁰		
P13243-016CF	4217	4260	4303	140	160	3.1	5.5 × 10 ⁸	6.9 × 10 ⁸	1.0 × 10 ⁻¹⁰	1.3 × 10 ⁻¹⁰			
	3820	3900	3980	90	110	3.0	5.2 × 10 ⁸	6.5 × 10 ⁸	1.1 × 10 ⁻¹⁰	1.3 × 10 ⁻¹⁰			


*4: Uniform irradiation on the entire photosensitive area

*5: V=0 V, R_L=50 Ω, 10 to 90%, λ=1.55 μm


*6: V_R=0 V, f=1 MHz

Note: Uniform irradiation must be applied to the entire photosensitive area during use.


Spectral response

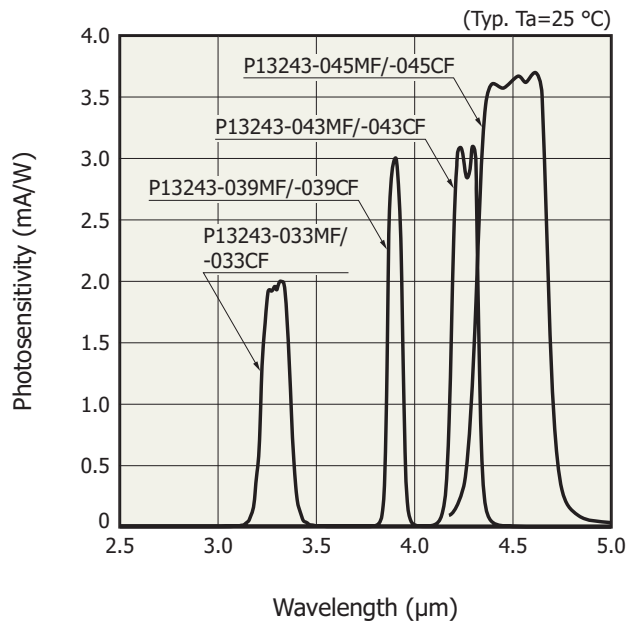

Shunt resistance vs. chip temperature

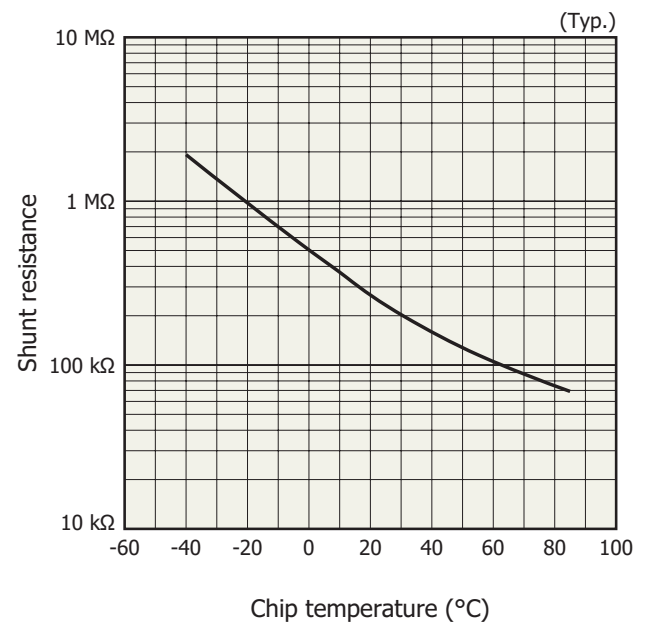


Measurement circuit example

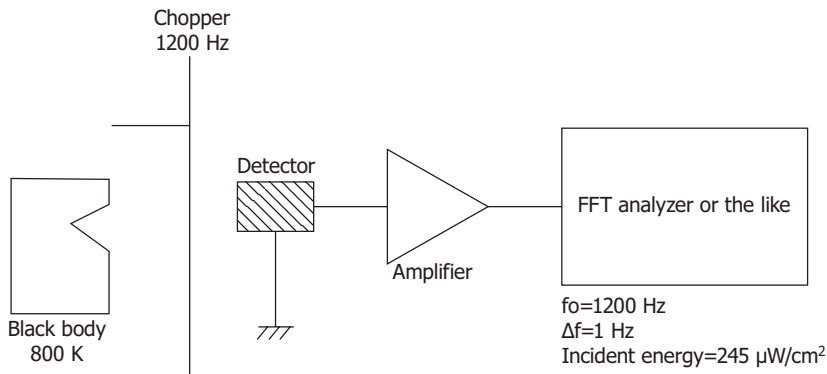


Dimensional outlines (unit: mm)

P13243-033CF/-039CF/-043CF/-045CF

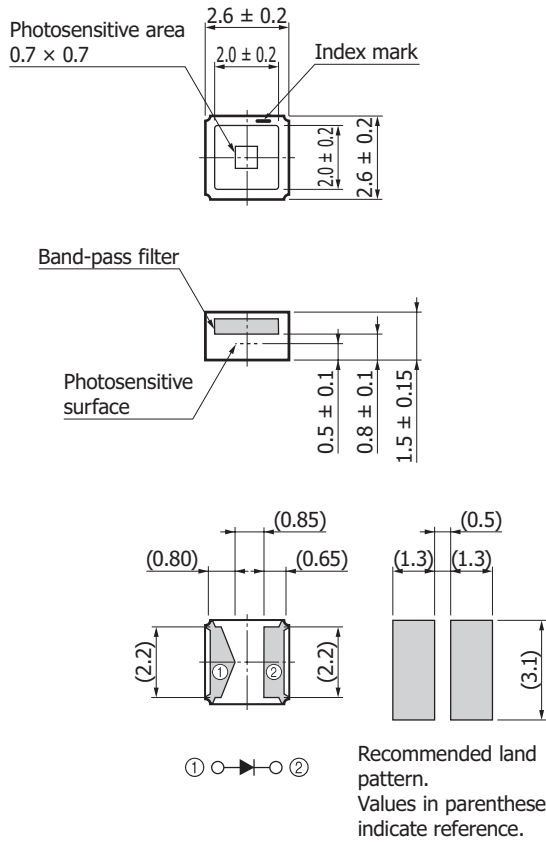




P13243-033MF/-039MF/-043MF/-045MF

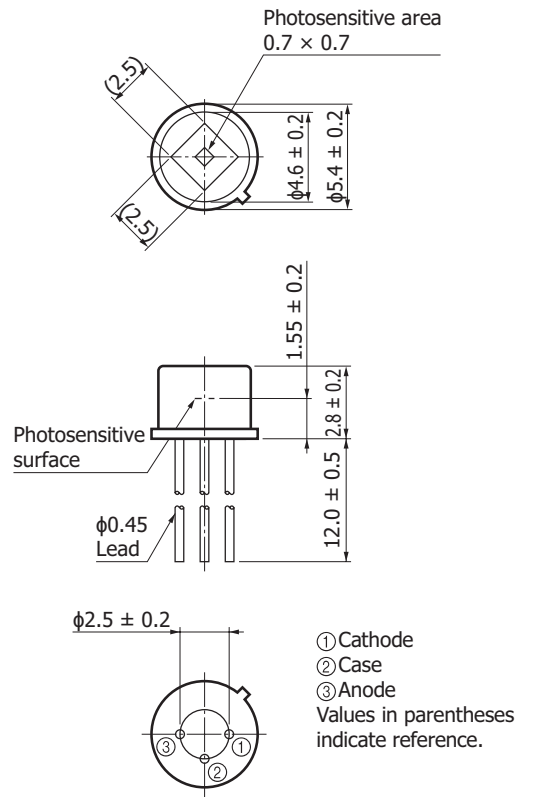


KIRDA0249EF

KIRDA0266EC

P13243-015CF/-016CF

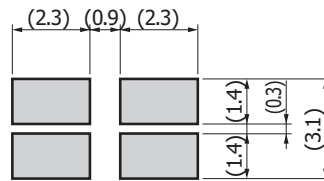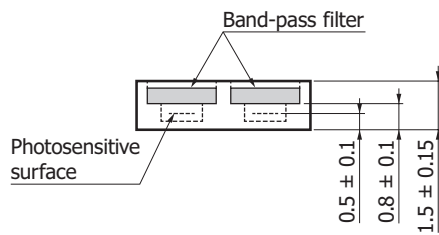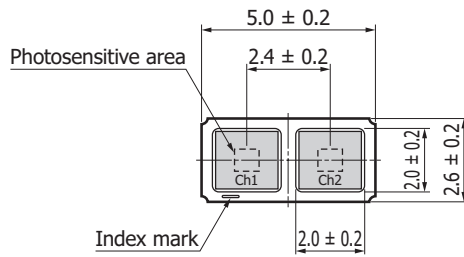

Recommended land pattern

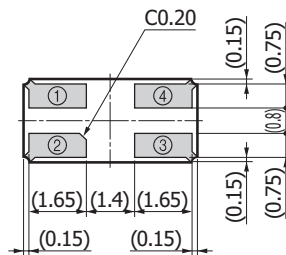

Type no.	Ch1	Ch2
P13243-015CF	3.3 μm	3.9 μm
P13243-016CF	4.26 μm	3.9 μm

- ① Cathode (Ch1)
 - ② Anode (Ch1)
 - ③ Anode (Ch2)
 - ④ Cathode (Ch1)
- Values in parentheses indicate reference.

KIRDA0267EC


Recommended soldering conditions

P13243-033MF/-039MF/-043MF/-045MF

Type no.	Solder temperature (°C)
P13243-033MF	240 (5 s or less, once)
P13243-039MF	
P13243-043MF	
P13243-045MF	

Note: When you set soldering conditions, check that problems do not occur in the product by testing out the conditions in advance.

P13243-033CF/-039CF/-043CF/-045CF/-015CF/-016CF

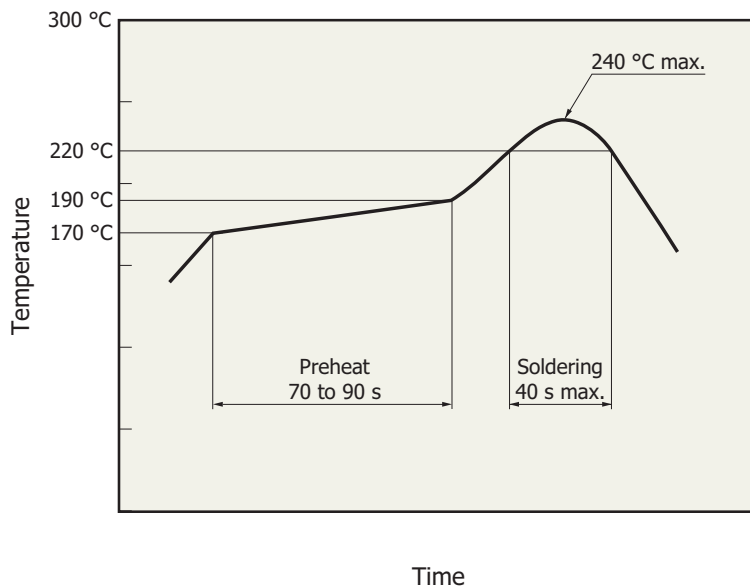

- After unpacking, store the device in an environment at a temperature range of 5 to 30 °C and a humidity of 60% or less, and perform reflow soldering within 1 year.
- The effect that the product receives during reflow soldering varies depending on the circuit board and reflow oven that are used. When you set reflow soldering conditions, check that problems do not occur in the product by testing out the conditions in advance.

KIRD80648EB

Related information

www.hamamatsu.com/sp/ssd/doc_en.html

Precautions

- Disclaimer
- Compound opto-semiconductors

Information described in this material is current as of September 2020.

Product specifications are subject to change without prior notice due to improvements or other reasons. This document has been carefully prepared and the information contained is believed to be accurate. In rare cases, however, there may be inaccuracies such as text errors. Before using these products, always contact us for the delivery specification sheet to check the latest specifications.

The product warranty is valid for one year after delivery and is limited to product repair or replacement for defects discovered and reported to us within that one year period. However, even if within the warranty period we accept absolutely no liability for any loss caused by natural disasters or improper product use. Copying or reprinting the contents described in this material in whole or in part is prohibited without our prior permission.

HAMAMATSU

www.hamamatsu.com

HAMAMATSU PHOTONICS K.K., Solid State Division

1126-1 Ichino-cho, Higashi-ku, Hamamatsu City, 435-8558 Japan, Telephone: (81)53-434-3311, Fax: (81)53-434-5184

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218, E-mail: usa@hamamatsu.com

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-265-8, E-mail: info@hamamatsu.de

France: Hamamatsu Photonics France S.A.R.L.: 19, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10, E-mail: infos@hamamatsu.fr

United Kingdom: Hamamatsu Photonics UK Limited: 2 Howard Court, 10 Tewin Road, Welwyn Garden City, Hertfordshire AL7 1BW, UK, Telephone: (44)1707-294888, Fax: (44)1707-325777, E-mail: info@hamamatsu.co.uk

North Europe: Hamamatsu Photonics Norden AB: Torshamnsgatan 35 16440 Kista, Sweden, Telephone: (46)8-509 031 00, Fax: (46)8-509 031 01, E-mail: info@hamamatsu.se

Italy: Hamamatsu Photonics Italia S.r.l.: Strada della Moia, 1 int. 6, 20020 Arese (Milano), Italy, Telephone: (39)02-93 58 17 33, Fax: (39)02-93 58 17 41, E-mail: info@hamamatsu.it

China: Hamamatsu Photonics (China) Co., Ltd.: 1201 Tower B, Jiaming Center, 27 Dongsanhuan Beilu, Chaoyang District, 100020 Beijing, P.R.China, Telephone: (86)10-6586-6006, Fax: (86)10-6586-2866, E-mail: hpc@hamamatsu.com.cn

Taiwan: Hamamatsu Photonics Taiwan Co., Ltd.: 8F-3, No. 158, Section2, Gongdao 5th Road, East District, Hsinchu, 300, Taiwan R.O.C. Telephone: (886)3-659-0080, Fax: (886)3-659-0081, E-mail: info@hamamatsu.com.tw